

HICAPS TRINITY TERMINAL USER GUIDE



CONTENTS

1.	Glossary of Terms	4
2.	Getting to know your terminal	6
2.1	Diagram of HICAPS Trinity Terminal	6
	Terminal base	7
2.2	Terminal Accessibility features	9
2.3	HICAPS Home Screen Navigation	11
2.3.1	HICAPS Trinity Terminal Home Screen	11
3.	HICAPS	12
3.1	Registering a new provider	12
3.2	Modifying a provider	12
3.3	Deleting a provider	12
3.4	Processing a health fund claim	12
3.5	Processing a health fund quote	16
3.6	Cancelling a health fund claim	19
3.7	Manual daily transaction summary (HICAPS Totals)	22
3.8	Ordering terminal paper rolls	23
4.	EFTPOS	24
4.1	Sale	24
4.2	Sale – manual card entry	26
4.3	Refund	30
4.4	EFTPOS Settlements	39
4.4.1	Manual EFTPOS settlement	39
4.4.2	Automatic settlement	40
5.	Terminal functions	41
5.1	Accessibility	41
5.1.1	About the Terminal Accessibility Features	41
5.1.2	Speech for the Visually Impaired	41
5.1.3	PIN entry training mode	43
5.1.4	Changing Colour/Large Text	46
5.2	Support	48
5.2.1	Contact	48
5.2.2	Changing the paper roll	48
5.2.3	HICAPS logon test	49
5.2.4	Manager passcode	49

6.	Terminal communications	50
6.1	Terminal communication methods	50
6.1.1	Connectivity	50
6.1.2	Claims processing and communications on the HICAPS Trinity terminal	50
6.2	Communications identifiers	51
6.2.1	Mobile signal	51
6.2.2	Bluetooth®	51
6.2.3	Wi-Fi	51
6.2.4	Terminal battery charge	51
6.2.5	Powering and restarting the terminal – On/Off/Restart	51
6.3	Communication settings	52
6.4	Bluetooth pairing	52
6.5	Configuring Wi-Fi	55
6.6	Completing a heartbeat	56
7.	HICAPS response codes	57
7.1	Accessing HICAPS response codes	57
7.2	Accessing item level HICAPS response codes	58
8.	Payment transactions error messages and corrective actions	60
8.1	Payment error messages	60
9.	Merchant requirements to ensure EFTPOS transactions are valid	60
9.1	Manual transactions	60
10.	Termination of EFTPOS merchant service	60
11.	Contacts – HICAPS/EFTPOS	61
11.1	HICAPS Help Desk	61
11.2	Access Trinity Support Guides	61

1. GLOSSARY OF TERMS

Term	Description
AEST (Australian Eastern Standard Time)	The time zone used for automatic settlements on the HICAPS Trinity terminal unless otherwise configured.
benefit	Value of rebate authorised by a Health Fund.
body part	Two-digit alpha/numeric identifying the part on the body on which the service was performed.
cancel	Reverses a transaction processed through the terminal.
card	A membership card issued by a Health Fund or an EFTPOS or credit card, issued by a bank.
claim	After treatment is provided, details are sent electronically via the terminal to the Health Fund.
claim declined	When a Health Fund declines to pay the request, a brief response message will print with each declined item and/or claim.
claim receipt	Either the terminal or the associated Practice Management System prints a receipt, which must be signed by the patient to acknowledge services and approve the transfer of payment to the provider.
claim to sale	The terminal facility allowing you to start an EFTPOS transaction using the Gap amount returned from the HICAPS Claim.
clinical code	Two-digit alpha/numeric identifying the body part/primary condition/diagnostic intervention on which the service was performed.
fallback	The terminal was unable to contact the bank to process an EFTPOS transaction, but the transaction has been approved/declined and will be sent to the bank with the next transaction.
gap payment	The amount remaining after the Health Fund has approved a benefit for the specified services.
heartbeat	A short message sent by the terminal to the terminal management system every hour. It sends statistical information and checks for updates.
HICAPS	Health Industry Claims and Payments Service. The company responsible for the switching of transactions to health funds from the terminal.
issue date	The date the membership card was issued. Those cards with issue dates have them printed on the bottom right-hand corner of the card.
item cost	The amount charged for a given item of service.
item number	Numeric code identifying the type of service performed. Refer to the HICAPS website for a full list of approved service item numbers by modality. https://www.hicaps.com.au/support/guides/item-number-guides
member	A customer of a Health Fund.

Term	Description
MMF	The Multi-Merchant Facility. This is a feature of the HICAPS terminal which optionally allows you to settle the EFTPOS funds separately for each provider.
patient ID	A member listed on the card which identifies a given patient within a Health Fund membership.
Practice Management System	The PC-based system which allows a transaction to be sent directly to the HICAPS terminal.
Provider	Practitioners who provide Health Services to patients.
provider number	<p>Is eight characters that uniquely identify each individual provider for a specific location. Provider numbers that HICAPS use are issued by Medicare Australia or Medibank Private.</p> <p>Provider numbers are location specific, so you must have a provider number for each location you wish to practice at.</p>
quick settings panel	A pull-down menu accessed on the terminal from the home screen, or within apps, which contains easy access settings for a number of commonly used settings, such as Wi-Fi, Bluetooth® etc. Swiping down from the top of the terminal screen will reveal the terminal's quick settings panel.
refund	Refunds a previous EFTPOS or credit approved transaction.
regular heartbeat	Heartbeats that occur outside the configured maintenance window.
reversal	Reverses an approved transaction on the same day the transaction was processed.
RRN	Receipt reference number (unique 12-digit field)
swipe member card	Pass the membership card through the card reader on the right-hand side of the HICAPS terminal.
tooth number	Two-digit FDI numeric identifying the tooth on which the service was performed.

2. GETTING TO KNOW YOUR TERMINAL

2.1 Diagram of HICAPS Trinity Terminal



- **Contactless Card Reader** – tap health fund membership cards and customer payment cards here. Digital cards are also read from the contactless reader.
- **Battery/Charge Indicator LED** – shows the battery level and charging status of the terminal.
- **Swipe Reader** – use to swipe customer health fund membership or payment cards with a magnetic strip.
- **Raised Tactile Dots** – surround the screen to assist with orientation of the digital keypad for PIN entry. Horizontal dots represent columns and vertical dots represent rows. (Refer to the Accessibility Guide for further information – see also www.hicaps.com.au/support/trinity-support/trinity-guides).
- **Chip Reader** – insert payment cards here.


- **Volume Controls** – use these buttons to adjust the volume of sounds and alerts. The volume buttons are used to adjust the volume of spoken instructions through the in-built speaker or headphones.
- **Power/Accessibility Button** – used to power the terminal on and off or to restart the terminal.
- **USB-Charging Port** – for a USB-C charging cable.
- **Audio Jack** – in accessibility mode, used by cardholders to assist with hearing audio prompts.
- **Base Charging Port and Indicator Lights** – every terminal comes with a power pack which connects into the side of the base.
 - A solid white light indicates the base is being powered.
 - A solid blue light indicates terminal connection with Bluetooth. A flashing blue light indicates pairing mode.

Note: Any touch screen stylus can be used on the terminal screen.

Terminal base



- **Rear camera** – required to pair with terminal base
- **Speaker** – for audio prompts
- **Charging pads** – for charging the terminal

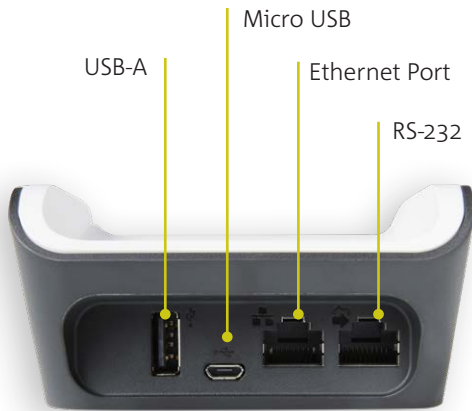

USB-A – currently not being used

Micro USB - currently not being used

Ethernet Port – used to connect the ethernet cable for receiving IP connectivity via an active LAN cable being plugged into the base.

2.2 Terminal Accessibility features

Terminal Front



Terminal Rear



Trinity home screen



2.3 HICAPS Home Screen Navigation

Your HICAPS Trinity terminal has a touch screen like an Android smart phone. It responds to gestures such as tapping and swiping.

- **Tap** – lightly touch to select or launch items
- **Swipe** – lightly drag your finger across a screen to swipe. For example, swipe down from the top of the screen to access the apps panel.
- **Touch and hold** – touch and hold items to open more menus.

2.3.1 HICAPS Trinity Terminal Home Screen

- **Navigation bar** – includes indicators for Bluetooth, Wi-Fi and mobile connectivity, battery charge status and time of day
- **Settings menu** – provides access to terminal and other settings
- **Transaction types** – provides access to HICAPS transactions to submit and cancel claims or to request a quote. Provides access to the payment application and a range of settings related to payments.
- **Support menu** – provides access to terminal and system information
- **Terminal ID (TID)** – the TID is displayed for easy terminal identification
- **Software version** – The software version is displayed to provide easy identification of the current version installed on the terminal.
- **Back** – allows users to go back to a previous screen.
- **Home** – returns user to the HICAPS application.
- **Merchant ID** – shows the merchant identification number for the primary merchant on the terminal.
- **Settlement menu** – provides access to the current and previous day's settlements
- **Sale** – provides access to the payment application for sales and other non-HICAPS transactions
- **Reports** – provides access to a range of NAB, HICAPS and transaction reports
- **HICAPS application menu** – provides access to transactions, settlements, reports, settings, support and a terminal guide.

3. HICAPS

3.1 Registering a new provider

To add providers you will need to register their details by completing the online form (Register a new provider), available on the HICAPS website www.hicaps.com.au/forms.

Once the completed form and supporting documents have been submitted and approved by HICAPS, the provider updates will be sent to the associated health funds and the new provider/s will automatically appear on your HICAPS Trinity terminal within 5 business days. Once a new provider appears on the terminal, they will be able to transact. There is no further action required.

3.2 Modifying a provider

To modify provider details, [login to HICAPS Accounts Online](#).

You can refer to the www.hicaps.com.au/support/guides for more information on making modifications.

3.3 Deleting a provider

You can remove a provider that is no longer practising at your location from your HICAPS Trinity terminal by completing the online form, available on the HICAPS website www.hicaps.com.au/forms.

Once the completed online form has been submitted and approved by HICAPS, the removal of the provider will be updated with the associated health funds and the requested provider/s will automatically be removed from your terminal within 5 business days.


3.4 Processing a health fund claim

STEP 1

To process a health fund claim transaction from the home screen, swipe or tap a patient's membership card on the terminal. Alternatively for Health Funds that allow key entry, you can manually enter the card number by tapping **Enter health card** on the home screen.

Note: Patients with digital health fund membership cards can use their Android or Apple devices to commence a claim.


Note: Some of the HICAPS participating health funds will not be supporting Wi-Fi or mobile terminal claiming. Claims processing is supported by all participating health funds when the terminal is Bluetooth paired with the base, with an ethernet cable connected. A list of the participating health funds that support mobile transactions is available on www.hicaps.com.au/partners/participating-health-funds

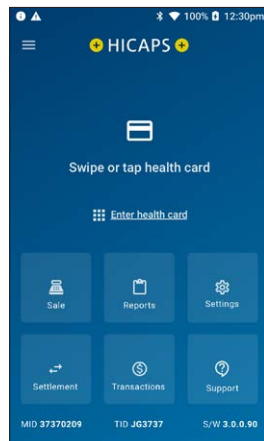

STEP 2

Select a health care provider from the list, or search for a provider by entering part of the provider’s name or ID in the search bar.


Note: This prompt will only be displayed if more than one provider is loaded into the terminal.

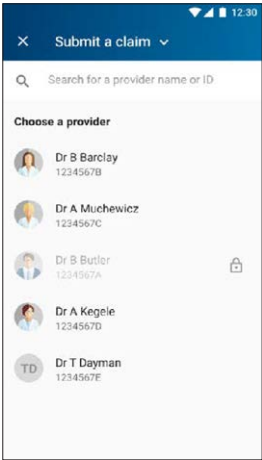

STEP 3


Enter the Patient ID (this is the number next to their name on the membership card) The Patient ID defaults to 01 on the terminal. Tap **NEXT** to proceed.

Note: For digital membership cards, if the patient has multiple members on their card they can get their Patient ID by tapping the ellipse ("°°") on their device or from their health fund’s app.

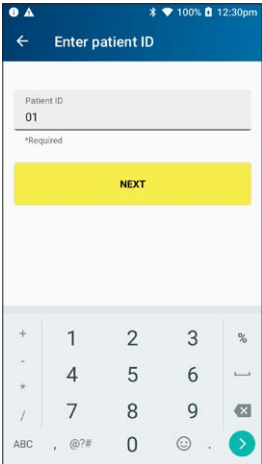

STEP 4

Select the claim item or **search** for items by number or name. As you type in the Search field at the top of the screen, options will be displayed. Tap on the relevant item to add it to the claim.

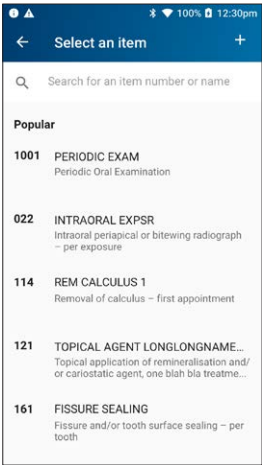

STEP 5

Enter clinical code if required, enter the amount for the item and tap ➤ to proceed. When all details are complete, tap **ADD TO CLAIM**.

Note: The item cost will display the amount that was last used for that item. The first time you use an item, you will need to add an item cost amount.

The date of service defaults to the current date. Use the calendar icon to select another date.

Item details1 / 16

1001 PERIODIC EXAM
Topical application of remineralisation and/or cariostatic agent, one blast bio treatment.

Date of service
13 Apr 2019, Thu

Date of service must be within the previous year

Clinical code
6Y

*Required

(\$) Item cost
\$250.00

*Required

ADD TO CLAIM

STEP 6

Before proceeding with approval to the health fund, details of the claim will display. From here you can add, delete or modify items and patients.

To add additional items, tap **ADD ITEM**. To make a claim for a different patient, tap **Add Patient**.

When ready, tap **SEND TO FUND**.

Note: The first copy of the receipt is required to be signed by the health fund member and retained for your office records. The health fund may require you to produce it.

Claim\$500.00

Dr Anne Davies
464784833

Patient

+ Add Patient

01 Patient ID 01
2 items

13 Apr 2019

012 Periodic Exam\$250.00

12145 NON SCHEDULED ITEM\$250.00

ADD ITEM

Deposit

Claim\$500.00

Dr B Butler
1234567A

Patient

+ Add Patient

01 Patient ID 01
2 items

Apr 13 2019

012 Periodic Exam\$250.00

12145 NON SCHEDULED ITEM\$250.00

ADD ITEM

CANCEL

SEND TO FUND

STEP 7

The claim will be sent to the member's health fund for assessment.

After the claim has been processed by the fund, the claim summary will be displayed.

If there is a gap payment to be paid, it will be displayed here. Tap **PAY** to continue, or use the "Additional Sale" drop down to add to the sale amount (See STEP 8).

Claim Summary\$300.00

Provider
RNN 1431552216

Dr Anne Davies
464784833

Additional sale

Total

Charged\$500.00

Benefit\$200.00

Gap payment\$300.00

Items

01 Patient ID 01
3 items

01 Patient ID 01
3 items

Fund
ABC Health Fund
4647848337336

Merchant
Northcote Clinic
12 High Street, Northcote

CANCEL

PAY

14

STEP 8

Additional sales can be added to the transaction prior to payment of any gap payment.

Tap on the **Additional sale** drop down menu to add an amount for payment. Tap **PAY** to proceed to the payment screen.

Note: The additional sale amount will be added to the gap payment amount. The total payable amount will be displayed on the payment screen (See STEP 9).

Additional sale


($\text{\$}$) Enter amount

ADD

if applicable

STEP 9

Ask the customer to present their payment card to finalise the transaction.

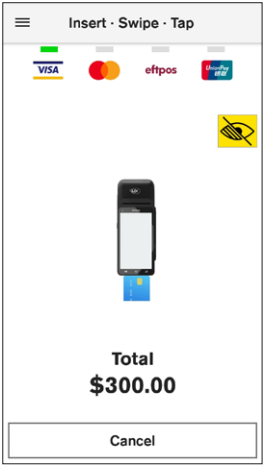


3.5 Processing a health fund quote

STEP 1

Swipe or tap the patient's membership card to start the health fund transaction.


Note: Patients with digital health fund membership cards can use their Android or Apple devices to commence a quote.

Alternatively, for health funds that allow key entry you can manually enter the card number by tapping **Enter health card** on the screen.

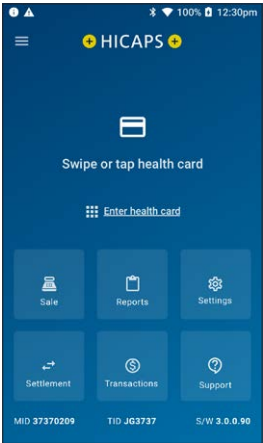


STEP 2

Tap **Submit a claim** at the top of the screen to open the dropdown list.

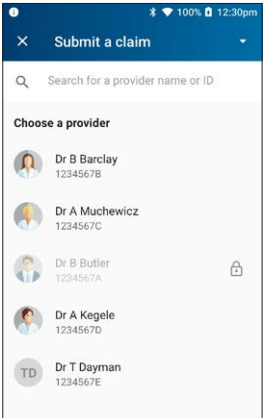

STEP 3


Select **Request a quote**.

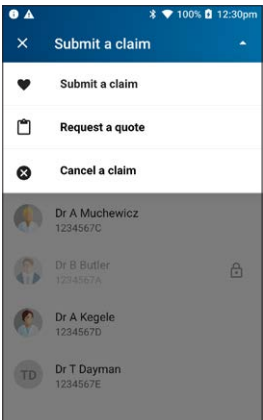

STEP 4

Select a health provider from the list, or search for a provider by entering part of the provider’s name or ID in the search bar.


Note: This prompt will only be displayed if more than one provider is loaded into the terminal.

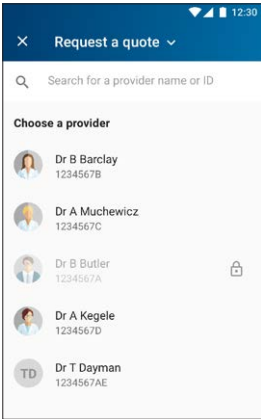

STEP 5


Enter the Patient ID (this is the number next to their name on the membership card). The Patient ID defaults to 01 on the terminal. Tap **Next** to proceed.

Note: For digital membership cards, if the patient has multiple members on their card they can get their Patient ID by tapping the ellipse (°°°) on their device or from their health fund’s app.

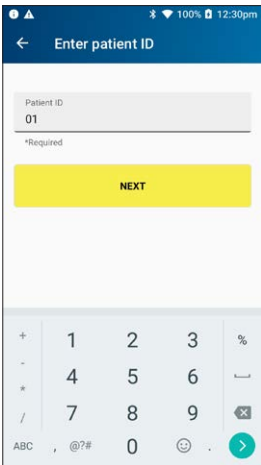

STEP 6

Select the claim item or search for items by number or name. As you type in the search field at the top of the screen, options will be displayed. Tap on the relevant item to add it to the claim.

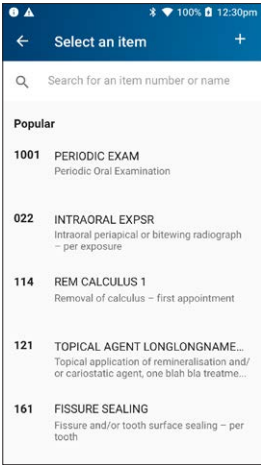

STEP 7

Enter the amount for the item and tap > to proceed, followed by **ADD TO QUOTE**.

Note: The item cost will display the amount that was last used for that item. The first time you use an item, you will need to add an item cost amount.

The date of service defaults to the current date. Use the calendar icon to select another date.

1/16

1001 PERIODIC EXAM
Periodic Oral Examination

Date of service
Thu, Apr 13 2019

Date of service must be within the previous year

Clinical code
62

*Required

(\$ Item Cost
250.00

*Required

ADD TO QUOTE

STEP 8

A summary of the quote is displayed. Items can be added, modified or deleted.

To add items, tap **ADD ITEM**.

To add a quote for another patient, tap **Add Patient**.

When ready, tap **SEND TO FUND**.

The quote will be sent to the member's health fund for assessment. A receipt with the quote and applicable gap payment will print. The receipt will be clearly marked with *****QUOTE ONLY*****.

Quote \$250.00

Provider
Dr A Kegele
1234567D

Patient + add patient
01 Patient ID 01
2 Items

Apr 13 2019

012 Periodic Exam \$250.00

+ ADD ITEM

CANCEL SEND TO FUND

STEP 9

The quote will be sent to the member's health fund for assessment.


Tap **"PRINT"** to print the details, including gap payment.

The receipt will be clearly marked: *****QUOTE ONLY*****

3.6 Cancelling a health fund claim


STEP 1

If you need to cancel a health fund claim, from the HICAPS home screen, tap **Transactions**.

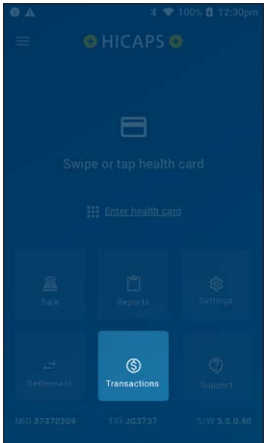

STEP 2


Tap **Cancel a claim**.

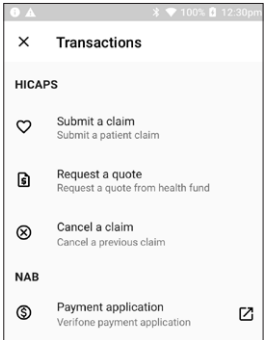

STEP 3

Swipe or tap the patient's membership card.


Alternatively, for health funds that allow key entry, you can manually enter the card number by tapping **Enter health card**.

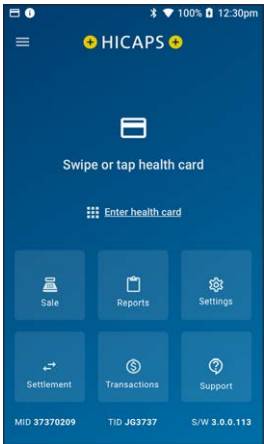

STEP 4


Select a claim or search for a claim to cancel using the RRN from the original receipt.

If the claim is not shown on the terminal, you can tap **Enter claim details manually**.

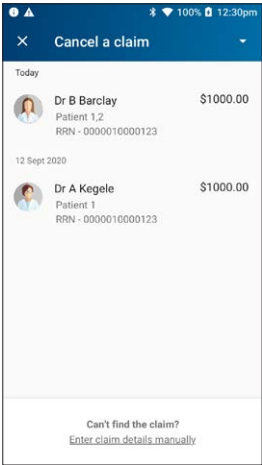


STEP 5

If entering the claim manually, type in the RRN and benefit amount from the original transaction receipt and tap **NEXT**.

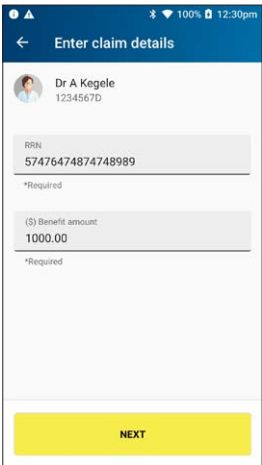

STEP 6

A summary of the original claim will be displayed. Check the claim details and tap **CANCEL CLAIM** to proceed.

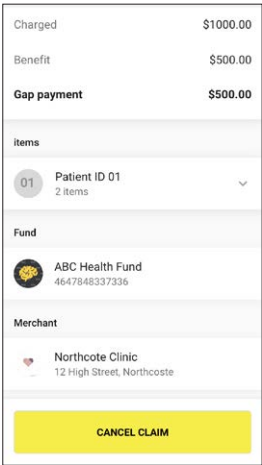


STEP 7

A warning message will be displayed to confirm cancelling of claim. Tap **CANCEL CLAIM** to continue.

Once a claim is cancelled, the claim is reversed and there is no way to reinstate it.

If you do not wish to cancel the claim tap **GO BACK**.


Note: The terminal will produce two copies of the cancellation receipt. The first copy must be signed by the Fund member and retained for your records, the second copy is for the member's records.

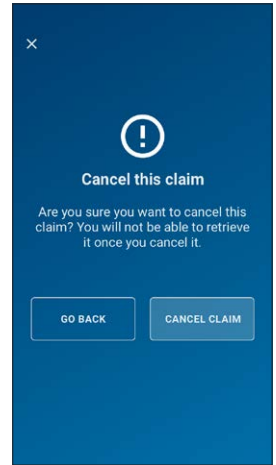

3.7 Manual daily transaction summary (HICAPS Totals)


STEP 1

Tap **Settlement** on the HICAPS Home Screen


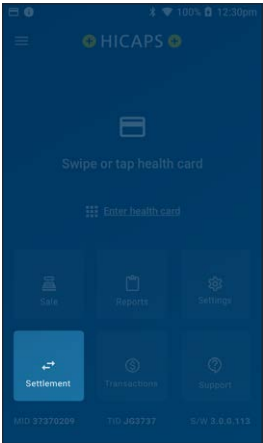


STEP 2

Under the **HICAPS** section, select **Today's totals** or **Previous days totals**.

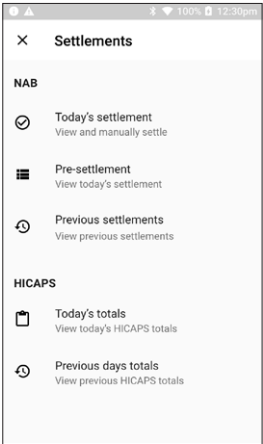


If there are multiple providers on the terminal, select the relevant provider or select **All providers** for all the providers on the terminal.

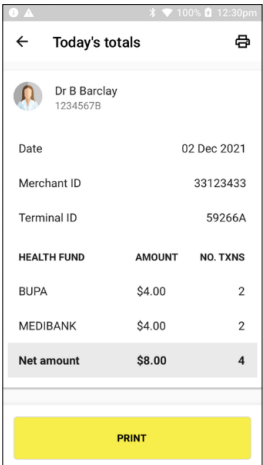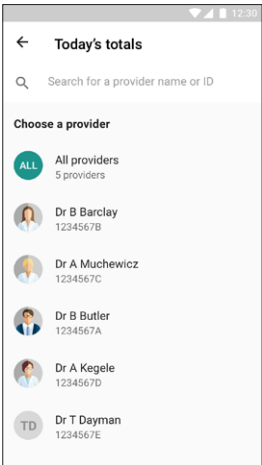


STEP 2 CONTINUED

Note: If you select **Previous days totals**, you can select a day in the last previous 30 days to print either a **Summary Listing** or a **Detailed Listing**.

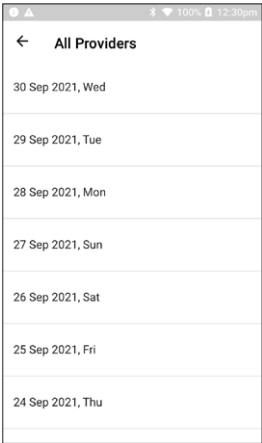

STEP 3

Tap **Print** or select the printer icon in the top right-hand corner to print either **Summary Listing** or **Detailed Listing**.

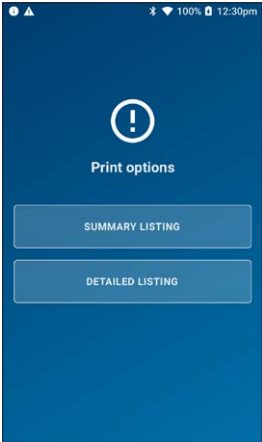

3.8 Ordering terminal paper rolls

If you need to order additional terminal paper rolls, please contact the HICAPS Help Desk on **1300 650 852**.


4. EFTPOS

4.1 Sale

STEP 1

To process an EFTPOS **Sale** transaction, tap the Sale icon on the home screen.

Note: If the terminal has been configured as a multi merchant terminal you will be prompted to select the appropriate merchant for the transaction.

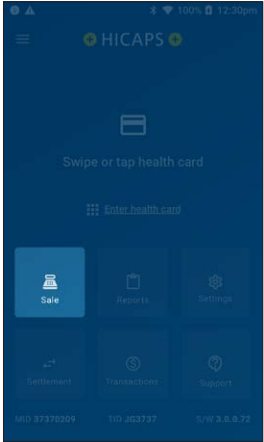


STEP 2

If the terminal has been configured as a multi merchant terminal you will be prompted to select the appropriate merchant for the transaction.


STEP 3

Enter the transaction amount and tap **NEXT**.

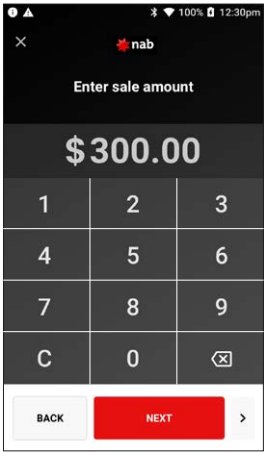

STEP 4


Ask the customer to present their card to finalise the transaction.

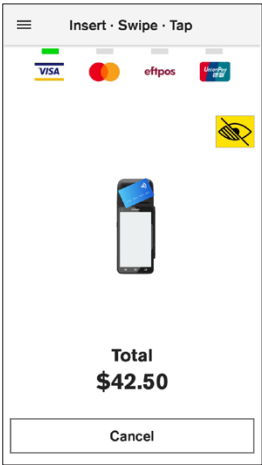

STEP 5

If a PIN is required to complete the transaction a keypad will be displayed for a customer to enter their PIN and tap **Enter** to complete the transaction.


Note: In some cases, the card will not require a PIN and therefore a signature will be required to complete the transaction.

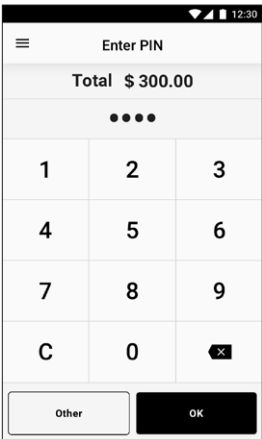

STEP 6

The transaction will be processed by the bank and will be approved or declined. Please ensure you check the screen and receipt to confirm the transaction was approved or declined.

A Merchant can choose to print a receipt following a response from the bank. Tap **Print** to print and **No Thanks** to decline printing a receipt.

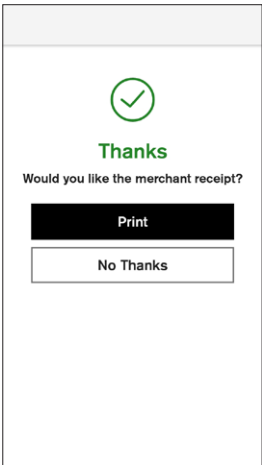


4.2 Sale – manual card entry

STEP 1


From the Home Screen, tap the **Sale** icon to enter the card details.

Note: If the terminal has been configured as a multi merchant terminal you will be prompted to select the appropriate merchant for the transaction.

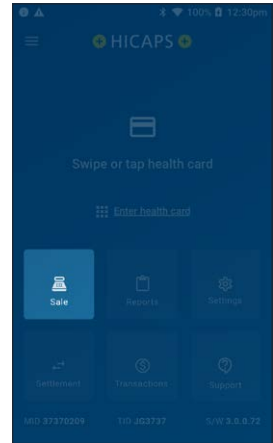

STEP 2



Enter the transaction amount and tap “>” in the bottom right-hand corner of the screen.

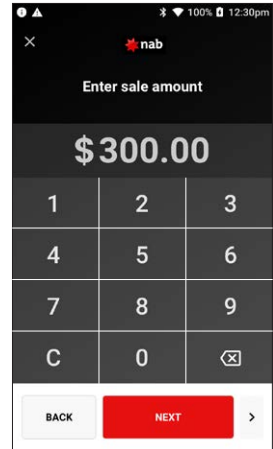

STEP 3

Select **Manual Card Entry** from the **Select payment method** screen.

When prompted for payment options, select **Manual**.

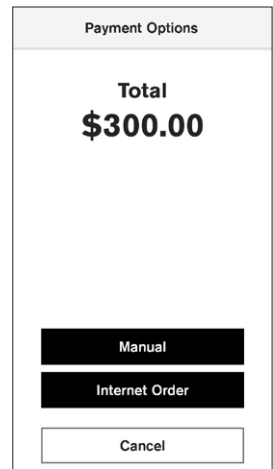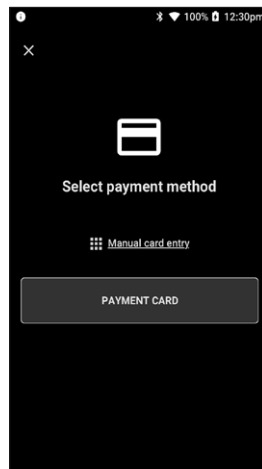

STEP 4

Enter the card number using the onscreen keypad and select **Enter**.

The card details are masked and some digits will appear as dots.

If the card details are correct, tap **Confirm**.

Enter Card Number		
Total \$300.00		
5163 61..		
1	2	3
4	5	6
7	8	9
	0	⌫
Cancel	Enter	

Enter Card Number		
Total \$300.00		
5163 61..		
1	2	3
4	5	6
7	8	9
	0	⌫
Cancel	Enter	

Confirm Card Number		
Total \$300.00		
5163 61.. 9717		
1	2	3
4	5	6
7	8	9
	0	⌫
Cancel	Confirm	

STEP 5

Enter the expiry date of the card (MM/YY) and tap **Enter**.

Enter Expiration Date		
Total \$300.00		
MM/YY		
1	2	3
4	5	6
7	8	9
	0	⌫
Cancel	Enter	

STEP 6

Enter the CVV and tap **Enter**.

The CVV is generally found on the back of the card.

Note: AMEX CVVs are on the front of the card.

If a PIN is required to complete the transaction, a keypad will be displayed for a customer to enter their PIN and tap **Enter** to complete the transaction.

Note: In some cases, the card will not require a PIN and therefore a signature will be required to complete the transaction.

Enter CVV

Total \$300.00

1	2	3
4	5	6
7	8	9
	0	⌫

Cancel

Enter

STEP 7

The transaction will be processed by the bank and be approved or declined. Please ensure you check the screen and receipt to confirm the transaction was approved or declined.

✓

APPROVED

Transaction completed successfully.

STEP 8

In some cases, the card will not require a PIN and therefore a signature will be required to complete the transaction. The customer can then sign the terminal screen so there is a record of their signature. Hand the terminal to the customer to sign on the touch screen.

Enter Signature

Sign Here

Total: \$5.00

I agree to pay the above total amount according to my card issuer agreement. **DEBIT** card ending in **9130**.
Authorisation number **688003**

Clear

Done

STEP 9

You must verify the signature prior to approving.

Tap **Yes, Approve** to continue or **No**.

Once authorised the terminal will display the transaction as **Approved**.

The printed receipt includes the customer signature for your records.




4.3 Refund

Refunds can be processed via two methods, as either a matched refund or an unmatched refund. HICAPS strongly suggests that a matched refund is used in all cases, as it ensures you are limiting your potential exposure to chargebacks. After finding the original transaction details on the terminal, processing a matched refund ensures the card number is matching and the refund cannot exceed the value of the original transaction.

To process a matched refund:


STEP 1

From the home screen, tap the **Transactions** icon.

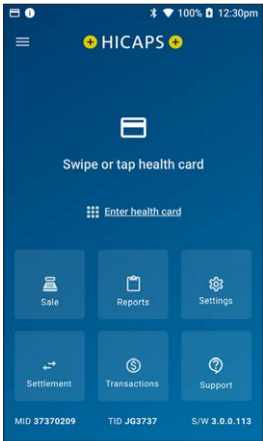


STEP 2

Tap **Refund**.

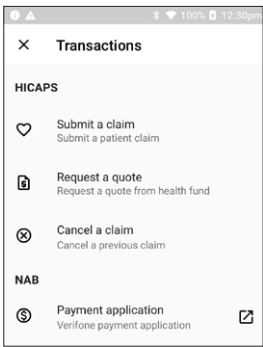

STEP 3

If you have multiple merchants, you will be prompted to select a merchant.


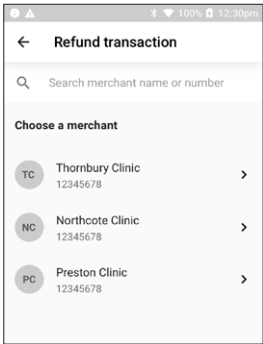


STEP 4

Tap the relevant date to view transactions.

Note: Up to thirty days of transactions are available to refund from the terminal


Alternatively tap the calendar icon and select a date.

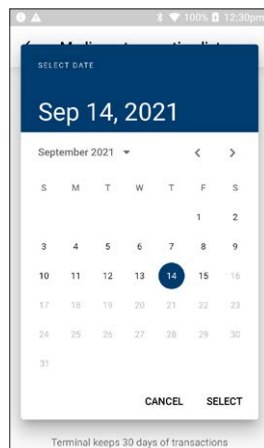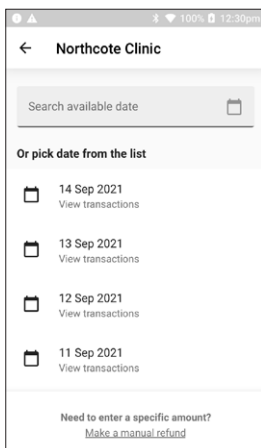

STEP 5

Select a transaction to be refunded.


Note: The transaction can be identified by the card used in the original transaction. The amount and RRN (receipt reference number) are also displayed and can be used to verify the correct transaction is selected for refunding.

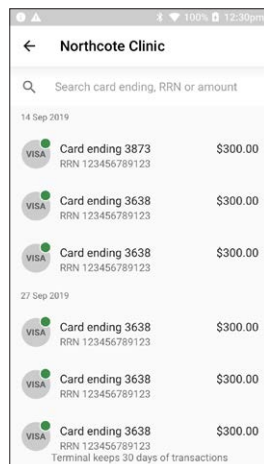

STEP 6

Confirm the details of the transaction and tap **REFUND**.

Tap ← to go back to the previous screen.

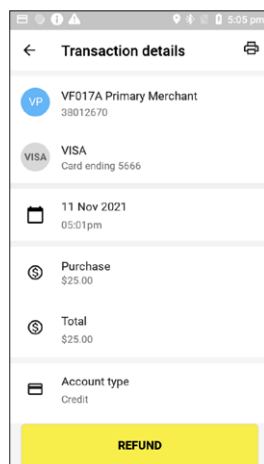

STEP 7

To complete the refund, the manager passcode must be entered.

If you have forgotten your passcode, you will need to contact the HICAPS Help Desk on **1300 650 852**.

Authenticate To Continue

Enter Manager passcode

1	2	3
4	5	6
7	8	9
C	0	⌫

Cancel

Enter

STEP 8

From the **Refund Options** screen, select **Card or Mobile**. Tap **Cancel** to go back.

Note: For manual card entry or internet order tap **Other payments**.

Refund Options

Refund

\$25.00

Card or Mobile

Other Payments

Cancel

STEP 9

Tap, insert or swipe the card used in the original transaction to process the refund.

Insert · Swipe · Tap

VISA

MasterCard

Apple Pay

android pay


Refund

\$25.00

Cancel

STEP 10

Enter a PIN and tap **OK** to proceed to refund the transaction.

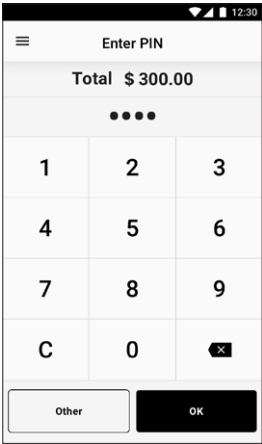


STEP 11

The customer can then sign the terminal screen so there is a record of their signature. Hand the terminal to the customer to sign on the touch screen.

Note: If the card has been inserted and the refund is being paid to a savings or cheque account, no signature is required.

After the customer has signed the screen and tapped **Done**, the terminal will display a message asking the customer to return the terminal to the merchant. When the customer returns the terminal to you, tap **DONE**.

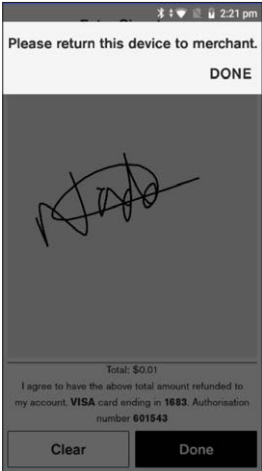

STEP 12

You must verify the signature prior to approving the refund. Tap **Yes, Approve** to continue or **No**.

Once authorised the terminal will display the transaction as **Approved**.


The printed receipt includes the customer signature for your records.



STEP 13

After printing a customer receipt, the terminal will display the Merchant Receipt screen.

Tap **Print** to print the merchant receipt or **No Thanks** to go back to the transaction details before returning to the home screen after 30 seconds.

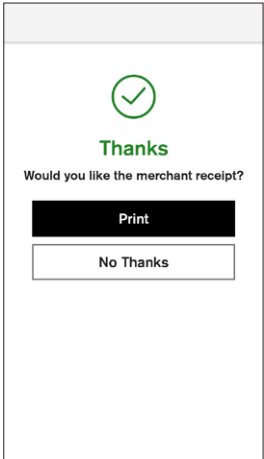


Option 2 – Unmatched Refund

Should you need to process an unmatched refund (i.e. unable to match it against the original payment card number), you can follow the steps below:

STEP 1


From the home screen, tap the **Transactions** icon.

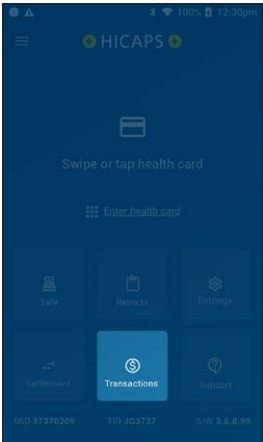

STEP 2


Tap the **Payment Application** icon.

Note: If the terminal has been configured as a multi merchant terminal you will be prompted to select the appropriate merchant for the transaction.

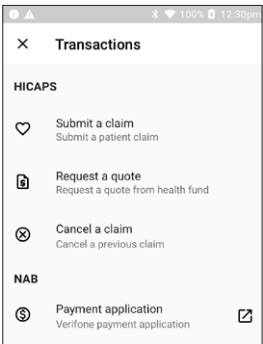


STEP 3

If you have multiple merchants, you will be prompted to select a merchant.

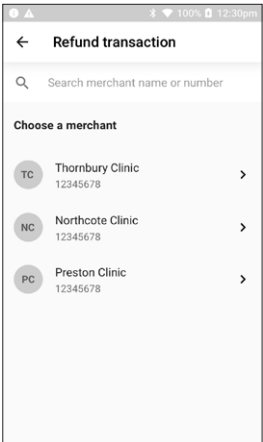


STEP 4

Enter an amount to refund and tap **Other** to display **Other Options**.

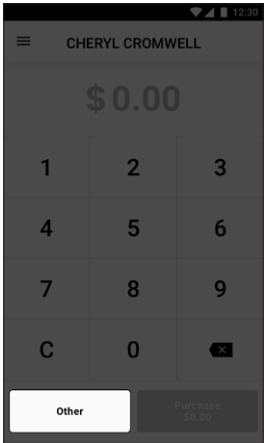

STEP 5

Select **Refund**

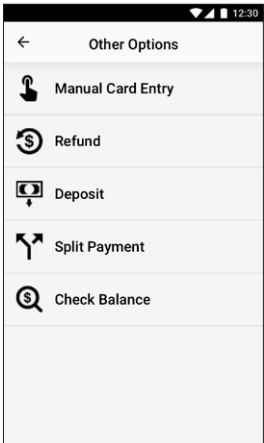

STEP 6

To complete the refund, you will be required to enter the manager passcode.

If you have forgotten the passcode, you will need to contact the HICAPS Help Desk on **1300 650 852**.




STEP 7

Select from the refund options to refund to a card, a mobile or enter a card number manually.




STEP 8

On the card presentation screen, tap or insert the original transaction card to process the refund.

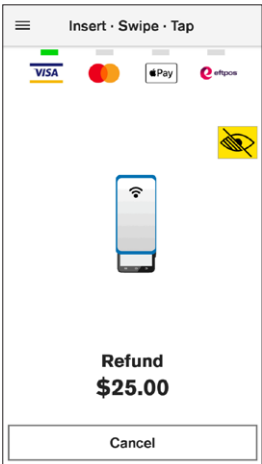

STEP 9


Cardholder may be prompted to select their account on the touch screen.

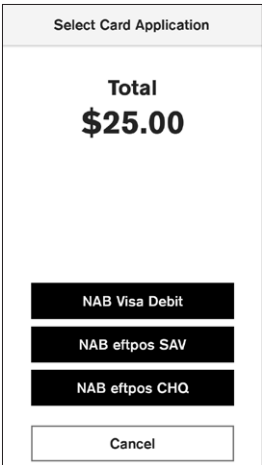

STEP 10

If a PIN is required to complete the transaction, a keypad will be displayed for a customer to enter their PIN and tap **Enter** to complete the transaction.


Note: In some cases, the card will not require a PIN and therefore a signature will be required to complete the transaction.

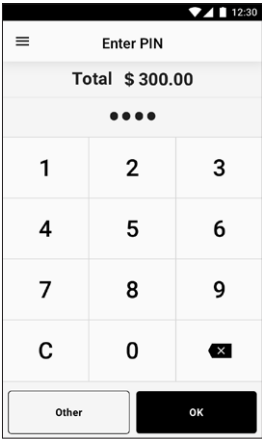

STEP 11

The transaction will be processed by the bank and be approved or declined. Please ensure you check the screen and receipt to confirm the transaction was approved or declined.

Merchant can choose to print a receipt following a response from the bank. Tap **Print** to print and **No Thanks** to decline printing a receipt.

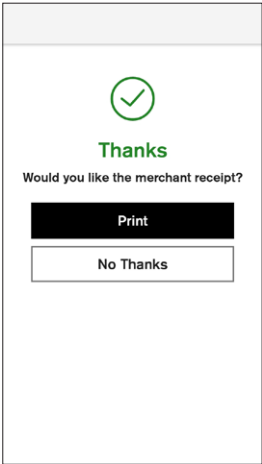


4.4 EFTPOS Settlements

4.4.1 Manual EFTPOS settlement

From the HICAPS Trinity terminal, you can view, perform and print settlements.

STEP 1

From the Home screen, tap the Settlement icon.

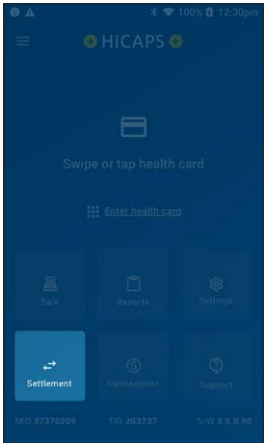

STEP 2


Select from the options provided:

Today's settlement – you can view and manually settle transactions for the day.

Pre-settlement – you can view and print transactions for the day.


Previous settlements – you can view and print up to 30 days of settlements by selecting the date of the settlements you want to view and print.

Note: Settlements older than 30 days cannot be viewed on the terminal.

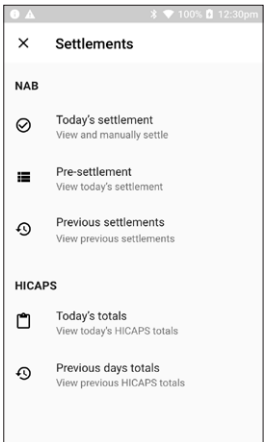

STEP 3


If the terminal has multiple merchants, select the merchant account you wish to settle or view. You may also settle all merchants at once by selecting the **All Merchants** option.

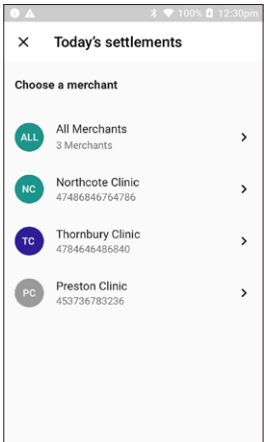

STEP 4

For manual settlement, tap **Settle** to confirm settlement.

Note: Manual settlement can only be completed if Automatic Settlement is disabled.

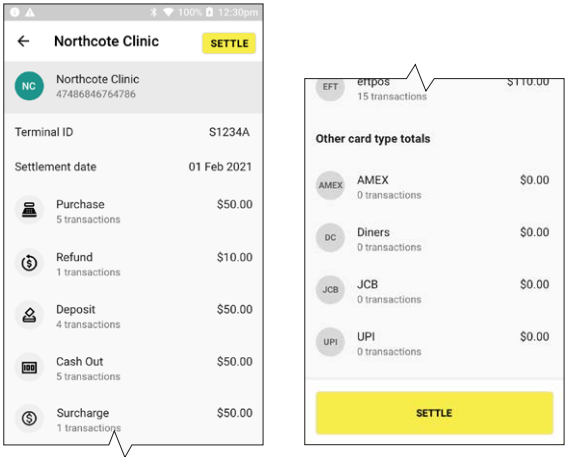


STEP 5

The terminal will print the settlement receipt.

Note: If you have settled during the day, the terminal will display **Already settled**. You can print a copy of the settlement.

Ready to print

Do you want to print a transaction listing for this settlement? Yes / No.

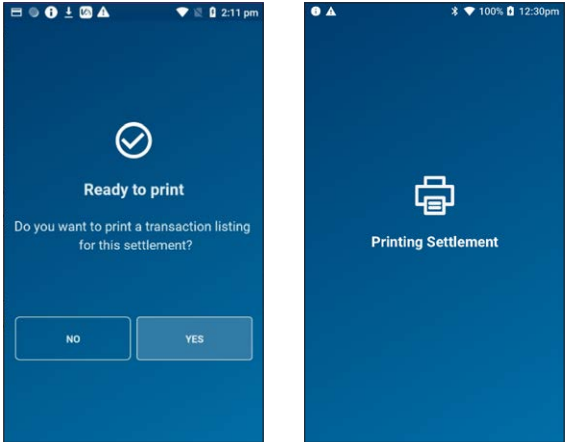

4.4.2 Automatic settlement

The HICAPS Trinity terminal automatically settles all transactions daily at 9:30pm AEST. The time for settlement can be set for a different time of your choice. Settlement can be configured to occur between 9am and 9:30pm AEST. Please refer to the section headed Automatic Settlement (AMIS) in the www.hicaps.com.au/support/guides on the HICAPS website for further information.

5. TERMINAL FUNCTIONS

5.1 Accessibility

5.1.1 About the Terminal Accessibility Features

HICAPS Trinity terminals have accessibility features to support users by making it easier to process transactions. Features include:

- Tactile dots surrounding the screen to orient the telephone keypad for PIN entry. Horizontal dots represent columns and vertical dots represent rows.
- Contactless card reader at the top of the terminal.
- Volume control buttons are next to the second vertical dot from the top, on the left hand side of the terminal.
- Headphone jack is next to the first vertical dot from the top, on the left hand side.

5.1.2 Speech for the Visually Impaired

STEP 1

On the card presentation screen, the terminal will sound a chime on the location of the terminal.

Double tap on the screen to enable voice reading, including the amount due and instructions to complete the transaction.

Payment cards can be tapped on top, inserted at the bottom or swiped on the right-hand side of the terminal.



STEP 2

Once a card has been presented, a voice will prompt to swipe left or right on the screen to choose an account. A voice prompt will read out the accounts available and prompt the customer to confirm the account to process the payment. Double tap to confirm selection.



STEP 3

If prompted for a PIN, the following instructions will be played:

‘Please enter a PIN.

The PIN pad has telephone layout with 1,2,3 at the top, and cancel, 0, ok at the bottom of the screen

Tactile bumps around the screen border indicating every column and row of the PIN pad.

The screen will be blank.

To find digits, start from one of the tactile bumps, and move one finger vertically or horizontally, until you hear a beep or the words cancel, or ok.

To find additional digits, move your finger around the keypad and listen for the beeps.

To select a digit, lift your finger, then tap two times using one finger on the screen and listen for the acceptance sound.

If you are not sure you found the right digit, do not double tap the screen. Simply start searching from the corner again.

The terminal will announce when you have entered 4 digits. To finish and pay, select ok at the bottom right and double tap towards the centre of the screen. To abort transaction, select the cancel at the bottom left and double tap towards the centre of the screen.’


5.1.3 PIN entry training mode

The HICAPS Terminal has a PIN entry training mode for cardholders to understand how to process payments requiring a PIN. To enable this function, use the following steps:

STEP 1

To process an EFTPOS Sale transaction, select **Sale** icon from the home screen.

Note: If the terminal has been configured as a multi merchant terminal you will be prompted to select the appropriate merchant for the transaction.

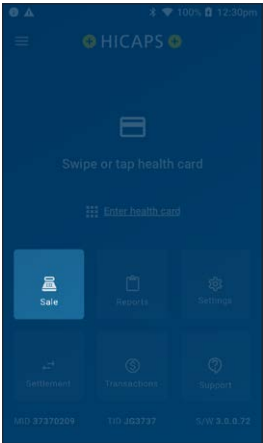


STEP 2

Enter a transaction amount and tap **Next**.




STEP 3

On the card presentation screen, tap the **Accessibility** icon on the top right-hand corner.

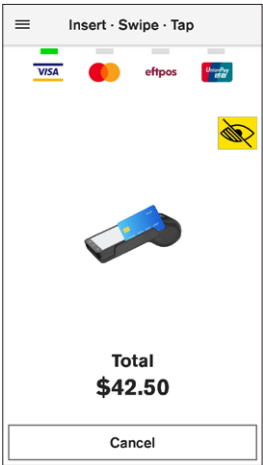


STEP 4

Select **Training for Visually Impaired** from **Vision Accessibility** options.

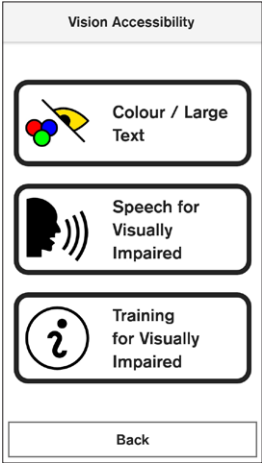

STEP 5

Select the preferred accessibility configuration, either **Double-Tap Using One Finger on the Screen** or **Use Button on the Side of the Terminal**.

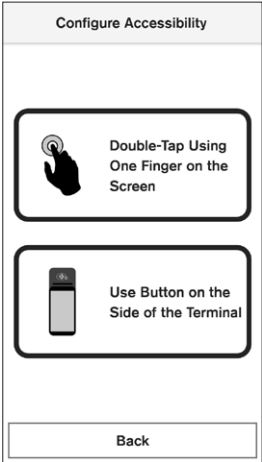

STEP 6

Follow the terminal instructions on how to orient the terminal to enter a PIN. The training instructions are:

‘Welcome to accessibility mode and PIN entry training. To enable accessibility mode during a transaction double tap using one finger on the screen when you hear the accessibility chime. Listen for the chime and try once now. (Chime sounds. Double tap the screen with one finger to proceed.) Training mode activated, double tap when you hear the chime.

PIN pad has telephone layout with 1,2,3 at the top, and cancel, 0, ok at the bottom of the screen.

Tactile bumps around the screen border indicating every column and row of the PIN pad.

Do not guess where the numbers are.

The size of this keypad is different from what you are used to and the numbers will not be spoken.

Only cancel and ok buttons will be spoken and can be used as reference points.

Please note, during PIN entry training only, all digits will be spoken.

To find digits, start from one of the tactile bumps, and move one finger vertically or horizontally, until you hear a beep or the words cancel, or ok.

To find additional digits, move your finger around the keypad and listen for the beeps.


To select a digit, lift your finger, then tap two times using one finger on the screen and listen for the acceptance sound.

To finish training, navigate to **Cancel** or **OK** and double tap using one finger on the screen.’

5.1.4 Changing Colour/Large Text

STEP 1


On the card presentation screen, tap the accessibility icon in the top right-hand corner.

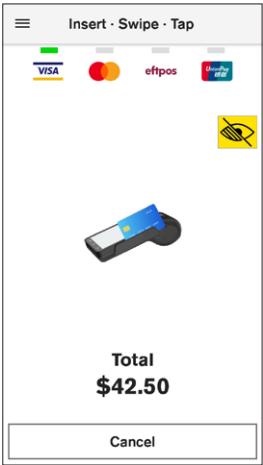

STEP 2


Select **Colour / Large Text** to change colour contrast and text size.

Note: Customers can connect headphones via the audio jack if required.

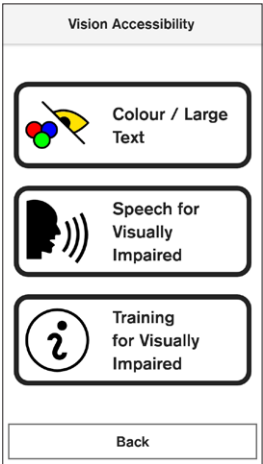

STEP 3

Cardholder can choose from 4 different colour options and will be used for the payments flow. All options will also provide larger buttons on screen and voice guidance.

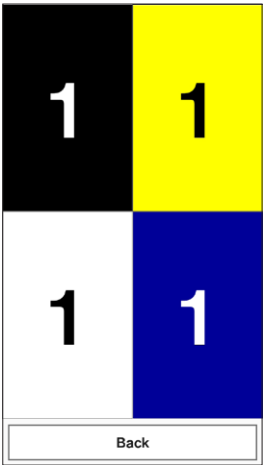


STEP 4

The customer will be prompted to present their payment card. An audible voice instruction will also advise on the location of where to present the card.




STEP 5

The cardholder may be required to select the card account type.

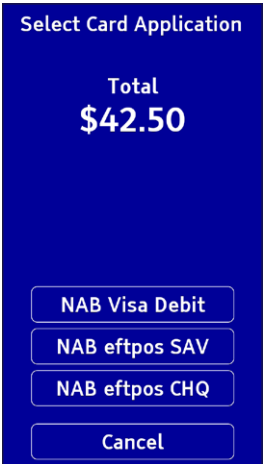

STEP 6

If prompted for a PIN, use the larger buttons on screen to enter a PIN.

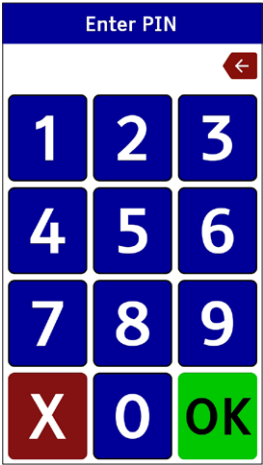

5.2 Support

On the home screen tap the **Support** icon to view the support options available on the terminal.

5.2.1 Contact

From the **Support** screen, tap **Contact** to display the contact numbers and opening hours for the HICAPS Help Desk and HICAPS Sales.

The HICAPS Sales team email address (hipassales@hicaps.com.au) and the HICAPS website (www.hicaps.com.au) are also displayed.

5.2.2 Changing the paper roll

STEP 1

Open the paper roll cover and remove the used paper roll.



STEP 2

Insert the new roll so the paper feeds from the bottom and up against the top of the terminal screen.



STEP 3

Close the printer door, pressing gently until it clicks shut, ensuring the leading edge of the paper is exposed.



5.2.3 HICAPS logon test

From the home screen, tap the **Support** icon, then tap HICAPS logon test to perform a HICAPS logon test. The terminal will display a message from NAB (Test successful) if the terminal can communicate.

Tap close to return to the **Support** menu.

5.2.4 Manager passcode

An administration passcode is used to modify some terminal settings and to set and change manager passcodes used for refunds etc. The admin and manager passcodes will be set up at installation of the terminal. The Manager passcode can only be changed by contacting the Merchant Help Desk on 1300 650 852.

Passcodes cannot repeat the same digit more than 3 times.

Passcodes cannot enter digits in sequential order.

Manager passcode must be 6 characters in length.

Users should only provide the administration passcode to individuals on a need-to-know basis.

The terminal will enforce a temporary lockout after three or more unsuccessful passcode attempts.

6. TERMINAL COMMUNICATIONS

6.1 Terminal communication methods

The HICAPS Trinity terminal supports a number of different communications methods for processing claims and will process transactions in the following priority: Ethernet (via Bluetooth® pairing to base), Wi-Fi and mobile.

Claims must only be processed at registered practice locations for which you have a location specific provider number. Please ensure that you use the provider number specific to the location at which the treatment has been provided and the HICAPS claim is processed.

6.1.1 Connectivity

The strength of the Bluetooth® and Wi-Fi connectivity on your terminal will depend on several factors but can be affected by physical obstructions, other electronic devices and distance. If your Bluetooth® or Wi-Fi connection strength is low, attempt to keep a clear line of sight with the Wi-Fi Router and or terminal base, with a maximum distance of 5m.

We recommend that every terminal should be paired with a terminal base upon setup, and that the terminal is returned to its base overnight. Leaving the terminal on its base allows for the terminal to receive important security updates and to maintain optimal charge levels.

6.1.2 Claims processing and communications on the HICAPS Trinity terminal

Claims processing is supported by all participating health funds when the terminal is connected by Ethernet (via Bluetooth® pairing to the base).

Some participating health funds will not support claiming via Wi-Fi or mobile. In these cases the terminal will display an error message that the health fund does not support Wi-Fi/mobile claiming when the patient's membership card is swiped. A list of the participating health funds that support Wi-Fi or mobile transactions is available at [hicaps.com.au/participating health funds](http://hicaps.com.au/participating-health-funds).

To ensure you can process claims from health funds that do not support Wi-Fi or mobile, your terminal needs to connect via Ethernet. If your terminal has lost Ethernet connection, an error message will appear when you try to process a health fund claim.

Should an error occur, check the notifications bar for the Bluetooth® paired symbol. (See section 6.2.2). If the Bluetooth® paired symbol is not displaying, swipe down from the top of the screen. Hold down the Bluetooth® symbol located to the right of the drop down bar. Turn the Bluetooth® toggle off and on again.

If the Bluetooth® paired symbol is displayed, attempt the transaction again.

If the problem persists, please call the HICAPS Help Desk on 1300 650 852.

6.2 Communications identifiers

6.2.1 Mobile signal

The mobile signal strength is displayed in the notifications bar in the top right hand corner of the terminal screen. Signal strength of 50% or more will provide a more stable connection, less than 50% strength may result in an unsuccessful transaction.

6.2.2 Bluetooth®

The Bluetooth® symbol is displayed in the notifications bar in the top right hand corner of the terminal screen. It will be displayed when Bluetooth® is turned on, but the terminal is not paired with a base or within range of a base. This means that transactions will not be processed via Ethernet when this is displayed.

When the Bluetooth® symbol displays triangles on either side, the terminal is paired to the base via Bluetooth®. Transactions will be processed via Ethernet, provided the terminal base has an ethernet cable plugged in.

6.2.3 Wi-Fi

The Wi-Fi strength is displayed in the notifications bar, in the top right hand corner of the terminal screen. When the Wi-Fi symbol is white, it indicates that both the terminal is connected via Wi-Fi and the approximate Wi-Fi connection strength. If half the symbol is white, this indicates signal strength of approximately 50%. Signal strength of 50% or more will provide a more stable connection, less than 50% strength may result in an unsuccessful transaction. If the Wi-Fi symbol is completely greyed out, you may not be able to process a claim and will most likely need to move closer to your modem router. If a transaction cannot be processed via Wi-Fi, the terminal will attempt to process the transaction using Mobile communications.

6.2.4 Terminal battery charge

The battery level is displayed in the notifications bar. The terminal battery will last up to 8 hours (depending on terminal usage). As often as possible we encourage you to charge your HICAPS terminal on the base, rather than directly via a USB Type C power pack to the wall. Leaving the terminal on its base allows for the terminal to receive important security updates. Once your battery contains less than 15% charge you may not be able to process a claim or print from your terminal. The use of a non-supplied charger or cable could damage either the terminal or the base.

6.2.5 Powering and restarting the terminal – On/Off/Restart

The terminal can be switched off using the power button. The power button is the top button located on the left hand side of the terminal, above the volume buttons. The power button allows you to turn the machine off (and on again) as well as to perform a restart. After pressing the power button, tap the option required, to **Power off** or **Restart**. Tap elsewhere on the screen to cancel the options and return to the home screen.

If a hard reset is required, hold the power button down for approximately 10 seconds to turn off the terminal. The power button will need to be held down again for another 10 seconds to restart.

6.3 Communication settings

It's important to understand that some health funds limit the types of treatments that can be claimed when using communications such as mobile and Wi-Fi.

Terminals are configured at install to use Ethernet communications wherever possible.

Claims processing is supported by all participating health funds when the terminal is connected by Ethernet (usually a LAN or network cable). This includes if the terminal is paired to the base via Bluetooth®.

If the terminal is removed from the base, the terminal will stay connected via Bluetooth® as long as the terminal is within range and the base is still connected to an active internet connection.

In the event your internet connection is temporarily unavailable, the Trinity terminal will attempt to process transactions via previously connected Wi-Fi or mobile networks.


For further information on communication settings please go to hicans.com.au and view the HICAPS Terminal Communications flyer.

6.4 Bluetooth pairing

Bluetooth pairing with the base is required to process transactions through the Ethernet communications on the base. If the base already has a solid blue light on the left hand side, the base has an existing pairing. Use the following steps to pair base with the Terminal.


STEP 1

From the HICAPS home screen, drag your finger from top of the screen to display the Android 'quick settings' panel.

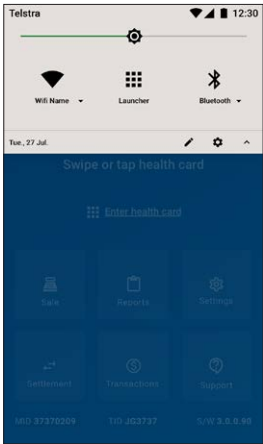


STEP 2

Tap the application launcher to display available applications.

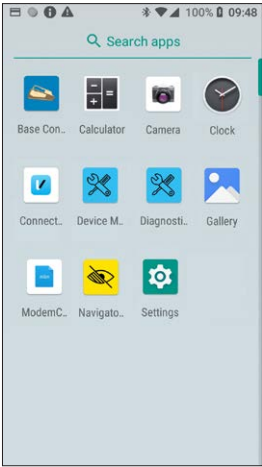

STEP 3

From the list of applications, select the **Base Controller Application**.

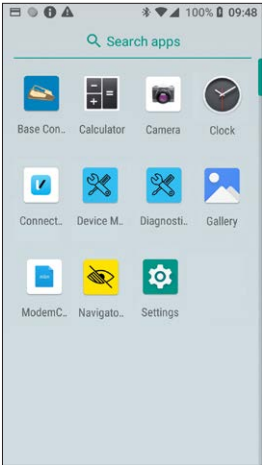

STEP 4

From the application, select **Pair A New Dock**.




STEP 5

Push the button on the front of the base to enable Bluetooth pairing mode and verify that the blue light on the left hand side of the base will blink once enabled.




STEP 6

Lying the terminal flat on its left hand side, with the rear camera facing the base, line up the lights on the screen within the rectangular box. When the lights line up, the terminal will begin pairing.

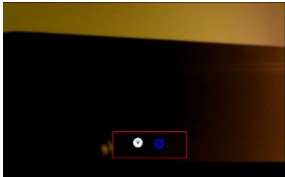

STEP 7


When the terminal completes this process, you will need to hold the button on the front of your terminal for 3 seconds. The tick box displayed on screen will confirm that Bluetooth pairing is complete.

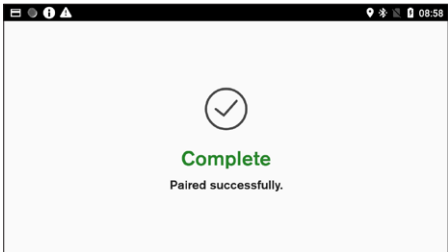

6.5 Configuring Wi-Fi


STEP 1

From the HICAPS home screen, drag your finger from top of the screen to display the Android ‘quick settings’ panel.

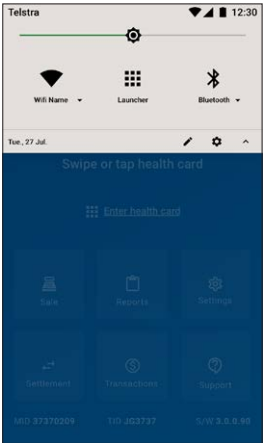


STEP 2

Hold the Wi-Fi icon, until the Wi-Fi configuration screen is open.

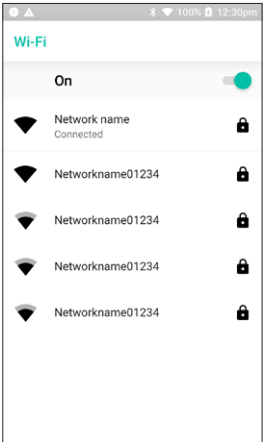

STEP 3

Confirm Wi-Fi is enabled with the toggle facing right (On) and select the desired Wi-Fi Name. HICAPS recommends that each device is connected to a secure Wi-Fi network with a strong password.

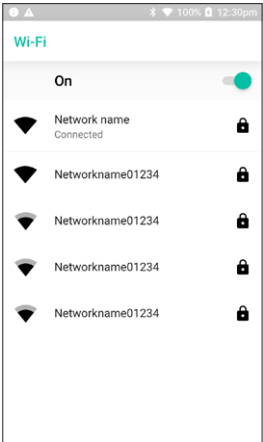


6.6 Completing a heartbeat

Terminals automatically send a heartbeat every hour to check for terminal updates. Your Trinity terminal may sometimes require an update. If you are asked to perform a heartbeat by the HICAPS support team, the following will assist you in completing this process.


STEP 1

From the HICAPS Home Screen, select **Support**.

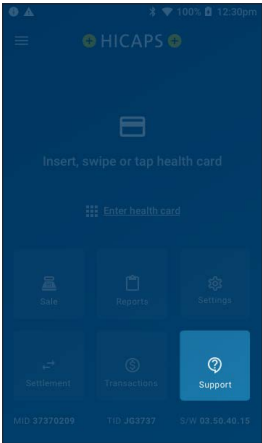



STEP 2

Under the 'Tests' menu, tap **Perform terminal Heartbeat**.

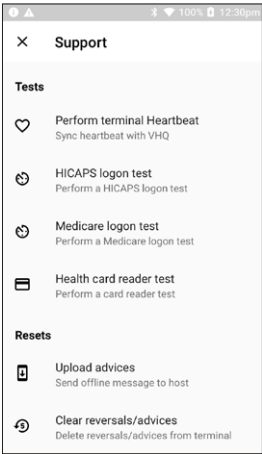

STEP 3

The terminal will perform a heartbeat and display a screen showing the heartbeat was successful.

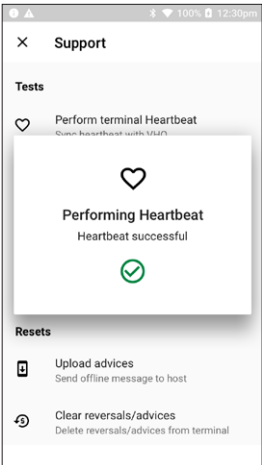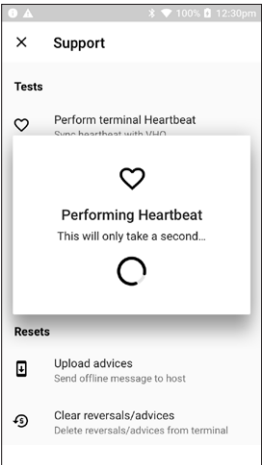

7. HICAPS RESPONSE CODES


7.1 Accessing HICAPS response codes

You can find HICAPS response codes on the HICAPS Trinity terminal and on the HICAPS website.

To access the HICAPS response codes on the HICAPS Trinity terminal, follow the steps below:


STEP 1

From the Home Screen, tap **Reports**.

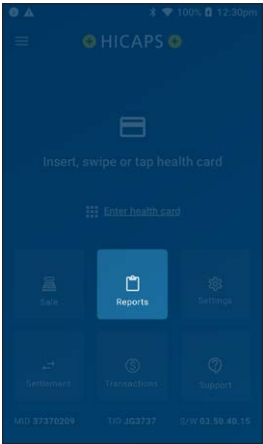


STEP 2

Tap **Transaction response codes**

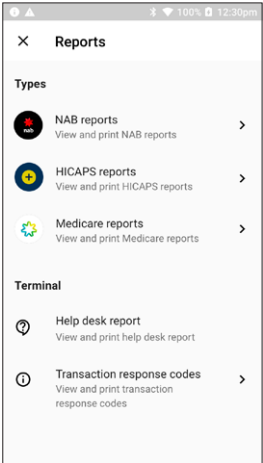

STEP 3

Tap **HICAPS response codes**

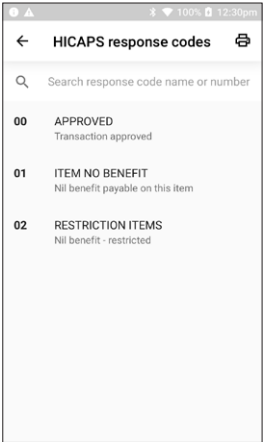

STEP 4

Scroll through the list of codes or use the search bar to enter numbers or letters to display the code you’re searching.

Note: You can print a list of HICAPS response codes by tapping the **print** icon in the top left corner while on the HICAPS response codes screen and tap **OK** on the confirmation screen.


HICAPS response codes – Click for a full and current list of transaction level HICAPS response codes.

7.2 Accessing item level HICAPS response codes

To access the item level HICAPS response codes on the HICAPS Trinity terminal, follow the steps below:


STEP 1

From the Home Screen, Tap on **Reports**

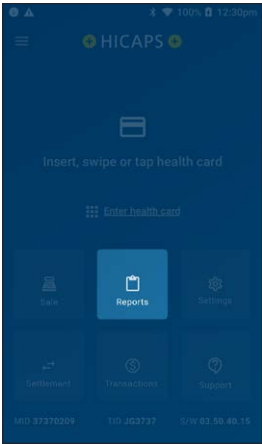


STEP 2

Tap **Transaction response codes**

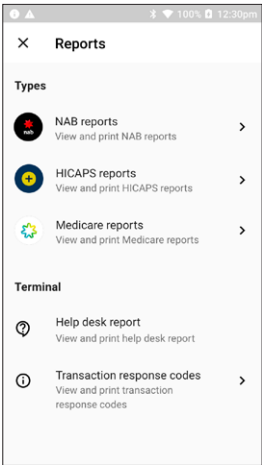

STEP 3

Tap **Gap response codes**

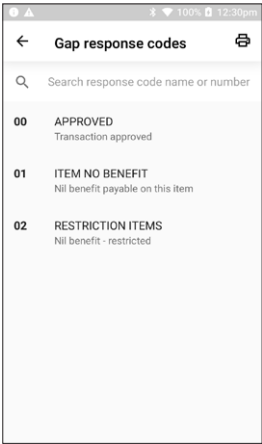

STEP 4

Scroll through the list of codes or use the search bar to enter numbers or letters to display the code you’re searching.

Note: You can print a list of item level HICAPS response codes by tapping the print icon in the top left corner while on the HICAPS response codes screen and tap **OK** on the confirmation screen.

Item level HICAPS response codes – Click for a full and current list of item level HICAPS response codes.

Note: Item codes in the range P0 – P9 and PA – PZ indicate that an item has been declined by the Health Fund for a specific reason. These items must be followed up directly with the Fund.

8. PAYMENT TRANSACTIONS ERROR MESSAGES AND CORRECTIVE ACTIONS

8.1 Payment error messages

You can find EFTPOS error messages on the HICAPS website.

EFTPOS error messages – Click for a full and current list of EFTPOS error messages.

9. MERCHANT REQUIREMENTS TO ENSURE EFTPOS TRANSACTIONS ARE VALID

9.1 Manual transactions

1. For all manual transactions.
 - a. Always try the transactions through the PIN pad first.
 - b. Check the card is being used after its 'valid from' date and before its 'valid to' date.
 - c. Ensure the card is not recorded on any warning bulletin.
 - d. Ensure that the card imprint is legible and complete.
 - e. Obtain authorisation for above floor limit transactions.
2. For any signature based transaction verify the cardholder's signature matches the signature on their card. If the signature does not match, or you are suspicious of the sale, contact the appropriate credit or debit card help number listed on the last page of this guide.
3. Ensure the accuracy of any card information keyed into the PIN pad.
4. Retain your electronic transaction receipts and manual transaction vouchers for a period of not less than 12 months.

If any of these conditions are not met, it is possible that the transaction may be invalid and the merchant account debited for the value of the disputed transaction.

10. TERMINATION OF EFTPOS MERCHANT SERVICE

Should you decide to terminate your HICAPS EFTPOS merchant service, you need to notify HICAPS using the online form on the HICAPS website. [Click here](#) for account amendment forms.

Following completion of the forms, our HICAPS installation team will call you to advise when the terminal and any additional equipment will be collected.

Failure to complete this process means fees will continue to be charged in accordance with the Merchant Agreement and Letter of Offer.

Terminal rental fees are charged per calendar month or part thereof. There are no refunds or pro rata calculation of terminal rental fees should you return a terminal or terminate your Merchant Agreement part way through a billing period.

11. CONTACTS – HICAPS/EFTPOS

11.1 HICAPS Help Desk

HICAPS Help Desk phone number is **1300 650 852**.

For HICAPS Help Desk hours of operation, [click here](#).

For authorisations:

- Credit Card (Credit) Account
This is an Australia-wide number **13 25 15**
- Debit Card (Cheque) or (Savings) Account
This is an Australia-wide number **1300 369 852**
- American Express **1300 363 614**
- Diners Club **1800 331 112**

Authorisation services are available 24 hours a day, 7 days a week.

For lost or stolen cards:

Please call the above authorisation line appropriate for the card type used (credit or debit).
Call 1800 033 103 about lost or stolen credit cards.

11.2 Access Trinity Support Guides

For the most up to date version of this full Trinity Terminal user guide, Quick reference guide and the Medicare Easyclaim user guide, please scan the QR code below.



